



## PROGRAMMING YOUR NEW TRANSMITTER

1. Open the case, with a coin.

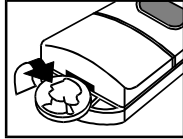

2. Use a pen to set the DIP switches to match the code of your existing transmitter or receiver.

### DIP Switch Location

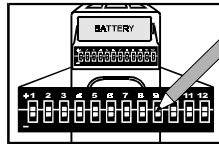


Each switch of this transmitter has 3 positions ("+", "0", "-"). If the switches of your existing transmitter (Stanley®,

Genie®, Multi-Code®, Linear®, Moore-O-Matic®, Martec®, Master Craft®) have only two positions, set switches of the model 66 to "+" for ON, and "-" for OFF or OPEN. Do not use "0" center position. If the switches of your existing transmitter (Chamberlain®, Sears®, Lift-Master®, Wayne Dalton® or Master Mechanic®) have 3 positions, set the switches of the model 66 to match their corresponding positions.

3. If your existing transmitter has fewer DIP switches than this transmitter, match only the first corresponding DIP switches. Leave the remaining DIP switches at "0", or the center position.


4. If your existing opener does not have any switches, then it can "learn" the code needed to open your garage door. Set the switches of the model 66 to any combination of "+, 0, -". Press the learn button on the garage door opener (unit with motor located in the ceiling of the garage) for approximately two seconds. The LED light located beside the learn button will go on. Then press the button on the model 66 transmitter and hold for about one second. The LED light on the garage door opener will flash then go off.

The model 66 is now programmed correctly and will open your garage door.

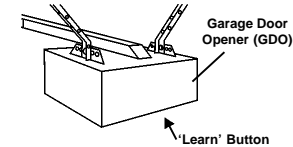

## PROGRAMMING YOUR NEW TRANSMITTER


5. If your Sears®, Chamberlain® or Lift-Master® transmitter has three buttons (two small, one large) then the button that operates the unit will determine how to set the number 1 DIP switch of the Skylink transmitter. If the large button is used to operate the unit, set the #1 DIP switch to "-" position; if the middle button is used, set the #1 DIP switch to the center position; if the button at the end is used, set the #1 DIP switch to "+" position. Set the other DIP switches (DIP switch #2 onward) to match the setting of your existing transmitter.



6. Determine the brand of your garage door opener and set the frequency frequency switch to the corresponding position.

Brand of your opener	Set frequency switch to position (USA)	Set frequency switch to position (Canada)
Chamberlain® 1983-1997	390 A	390 A
Lift-Master® 1983-1997	390 A	390 A
Sears® 1983-1997	390 A	390 A
Wayne Dalton® 1983-1997	390 A	390 A
Master Mechanic® 1983-1997	390 A	390 A
Genie® (9 positions) 1983-1997	390 A	390 A
Genie® (12 positions) 1983-1997	390 A	390 A
Master Craft® 1985-1997	-	390 A
Master Craft® 1985-1997	-	315 B
Linear® 1975-1997	310 B	310 C
M-O-M® 1983-1997	310 B	310 C
Stanley® 1976-1997	300 C	310 C
Multi-Code® 1976-1997	300 C	310 C
Martec/Teckey #992-2002	300 C	-

### Frequency Switch Diagram

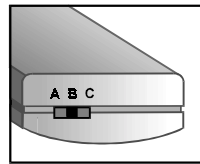

	A	B	C
USA	390	310	300
CANADA	390	315	310

### DIP switch setting to match your opener

	Position 1 to 8	+ OR -	
Linear (1975-1997)	Position 1 to 8	+ OR -	
M-O-M (1983-1997)	Position 1 to 8	+ OR -	
Stanley (1976-1997)	Position 1 to 10	+ OR -	
Multi-Code (1976-1997)	Position 1 to 10	+ OR -	
Chamberlain (1983-1997)	Position 1 to 9	+ 0 (center), OR -	
Lift-Master (1983-1997)	Position 1 to 9	+ 0 (center), OR -	
Sears (1983-1997)	Position 1 to 9	+ 0 (center), OR -	
Wayne Dalton (1983-1997)	Position 1 to 9	+ 0 (center), OR -	
Master Mechanic (1983-1997)	Position 1 to 9	+ 0 (center), OR -	
Genie (9 positions) (1983-1997)	Position 1 to 9	+ OR -	
Genie (12 positions) (1983-1997)	Position 1 to 12	+ OR -	
Master Craft (1985-1997)	Position 1 to 12	+ OR -	
Martec/Teckey (1992-2002)	Position 1 to 10	+ OR -	11 & 12 set to '+'

### WARNING

If this transmitter triggers other garage doors in your neighborhood, change all your transmitters and receiver to a new code setting.


DO NOT let children use the garage door transmitter without adult supervision. Children can injure themselves or others by the garage door.

### WARRANTY

If, within one year from date of purchase, this product should become defective (except battery), due to faulty workmanship or materials, it will be repaired or replaced, without charge. Proof of purchase is required.

### BATTERY

12 volt "cigarette lighter" type (size 23A) battery (included).

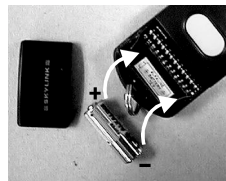

### FCC

The Universal Garage Door Remote Control is approved by the FCC and it complies with Part 15 of the FCC Rules. Its operation is subject to the following two conditions:

1. This device may not cause harmful interference.
2. This device must accept any interference that may cause undesired operation.

### WARNING:

Changes or modifications to this unit not expressly approved by the party responsible of compliance could void the user's authority to operate the equipment.


Skylink will not be held liable or responsible for any misuse or application of this product other than for its intended use.

### SKYLINK TECHNOLOGIES INC.

2213 Dunwin Drive  
Mississauga, Ontario,  
L5L 1X1, CANADA  
(905)608-9223  
(905)608-8744 FAX  
Email : support@skylinkhome.com  
(Reply within 24 hrs)  
Customer Service : (800)304-1187  
http://www.skylinkhome.com  
P/N. 101A074-004 Rev.4  
Patent no. D380895, 5680134, 5841390  
6005508  
©1995 SKYLINK TECHNOLOGIES INC.



### GARAGE DOOR/GATE REMOTE CONTROL USER'S INSTRUCTIONS (Model 66)

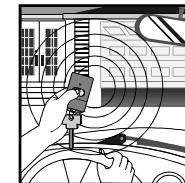

® are registered trademarks of their respective corporations